


STEP 01

UNZIP THE SLIPCOVER. HOLD THE SLIPCOVER IN ONE HAND. WITH YOUR OTHER HAND, FIRMLY GRASP THE INSERT AT ONE END.

STEP 02

PLACE THE INSERT INSIDE THE SLIPCOVER AND BEGIN STUFFING THE INSERT INSIDE THE SLIPCOVER UNTIL YOU HAVE FULLY INSERTED IT INTO THE SLIPCOVER.

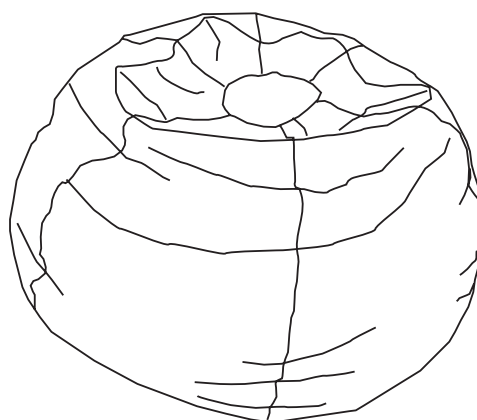

STEP 03

WHEN THE INSERT IS COMPLETELY INSIDE THE COVER, CLOSE THE ZIPPER AND WAIT FOR THE FOAM TO EXPAND. NOTE: MAY TAKE 24 HOURS TO FULLY EXPAND.

