


## STEP 01

LOOSEN THE NUTS (4PCS) UNDER THE UPPER BOX (PART 1) AS SHOWN.

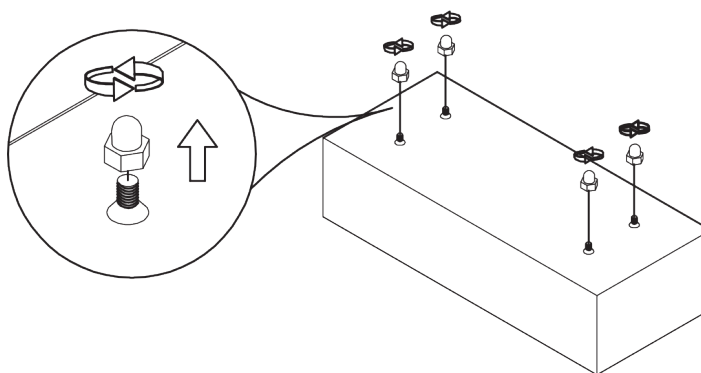

## STEP 02

1: TIGHTEN THE SCREWS AND NUTS TO THE PREDRILLED HOLES ON METAL FRAME.

2: ATTACH THE FELTS TO THE BOTTOM OF THE FRAME.

